

TEST the system before the final installation ON a bench for proper setup and operation

- 1 Select the operating frequency (See the transmitter and receiver manual)
Usually the frequency is already preset by the manufacturer to match the receiver
- 2 The numeric keypad is assigned to the channel to be activated at the receiver
1 = Channel 1, 2 = Channel 2, 3 = Channel 3, 4 = Channel 4
- 3 To test the system, make sure the transmitter and receiver are ON

Portable Transmitter operation

Push the PT button and Hold,
Push momentarily (3 seconds) the desired channel on the keypad and release
PT button

On the Receiver a LED and relay will energize Momentary (Pulse) on
your selected channel

5y6T1A Migro 2022



RECEIVER
Output Mode Switch
Momentary:
Pulse interval 3 seconds


Latch:
Pulse ON, Second Pulse OFF

NOTE:
When setting Output mode
1 Turn Power Off
2 Select Setting
3 Turn power On

Migro 160 Wireless Control

FCC Note:

You can select your own frequency to operate your system; FCC restriction may apply if the operating frequency is not in the free MURS band

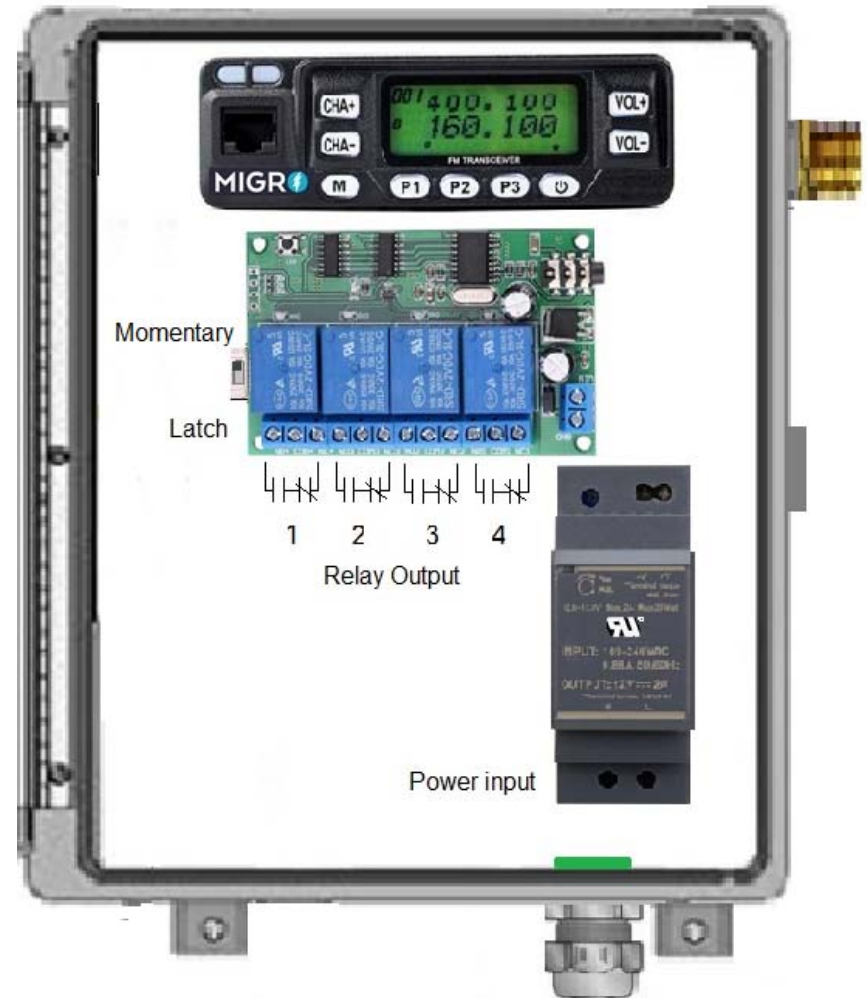

WARNING: Radio control equipment is not to be used in life safety.
DISCLAIMER: Contact a licensed professional for your project